

# Change Over Pro

Setup Main

Panel IP Address	DNS Address	CPU IP Address
192 . 168 . 1 . 17	0 . 0 . 0 . 0	192 . 168 . 1 . 18
255 . 255 . 255 . 0	0 . 0 . 0 . 0	255 . 255 . 255 . 0
0 . 0 . 0 . 0	0 . 0 . 0 . 0	0 . 0 . 0 . 0

The Panel IP address is used for things such as the built in Web server or VNC Protocols to access the unit from your computer.

The CPU Address is used for the communication from the controller to the Format Drives.

The Panel IP address DNS Settings can be used if there is domain name involved with your system.